Dometic

RECORD THIS INFORMATION FOR FUTURE REFERENCE:

Date Installed ______ Installed By _____ Product Serial Number _

USA

SERVICE OFFICE Dometic, LLC 2320 Industrial Parkway Elkhart, IN 46516 574-294-2511

CANADA

Dometic, LLC 46 Zatonski, Unit 3 Brantford, ON N3T 5L8 CANADA 519-720-9578

For Service Center Assistance Call: 800-544-4881



SERVICE INSTRUCTIONS

KiT, Svc ai R baffle 3313470.083

Form No. 3314600.000 01/12 (French 3314621.000) ©2012 Dometic, LLC LaGrange, IN 46761



Read these instructions carefully. These instructions MUST stay with this product.

in TRod Uc Tion

These instructions apply to Dometic model RM1350 refrigerator only. Use the following procedure to ensure a properly installed, and properly functioning unit.

Table Of C On Ten Ts

Introduct	lon	2
document	Symbol S	2
a.reco b.unde c.Supp d.Gene	Safety In Struct Ion S ognize Safety Information erstand Signal Words olemental directives eral Safety messages	3 3 3 3
General Ir a. Scop	nforma t lon De of d elivery	3 3
a. Insta B. Air	Illation preparation Installation stall r efrigerator	4 4

doc UMen T Sy Mbol S



Indicates additional information that is not related to physical injury.

Indicates step-by-step instructions.

iMpo RTan T Safe Ty in STRUc Tion S

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

a. Recognize Safety information



This is the safety alert symbol. It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

b. Understand Signal Words

A signal word will identify safety messages and property damage messages, and will indicate the degree or level of hazard seriousness.

AWARNING wa Rnin G! indicates a hazardous situation that, if not avoided, could result in death or serious injury.

A CAUTION ca UTion ! indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.

NOTICE NOTICE. is used to address practices not related to physical injury.

c. Supplemental directives



Read and follow all safety information and instructions to avoid possible injury or death.

Read and understand these instructions before servicing this product.

Incorrect servicing can lead to serious injury. Follow all service instructions.

d. General Safety Messages

AWARNING fail URe to obey the following warnings could result in death or serious injury.

- This product **MUST** be serviced by a Dometic, LLC Service Center or a service technician.
- Do **no T** modify this product beyond the scope of these service instructions. (beyond these service instructions) can be extremely hazardous.

A CAUTION fail URe to obey the following cautions could result in injury.

• CUT HAZARD. Wear protective gloves while handling or working near sheet metal components. Sheet metal parts could have sharp edges.

Gene Ral info RMaTion

a. Scope of delivery

- (1) Service Instructions
- (1)

pRoced URe


a. installation preparation



The air is installed through the upper side vent. To do this you will need to slide the refrigerator forward approximately 6 inches.

- 1. Turn refrigerator off at the control panel. Refer to RM1350 Operating Instructions.
 - Wa Rnin G! ELECTRICAL SHOCK HAZARD. Disconnect 120 Vac power from RV. Failure to obey this warning could result in death or serious injury.
 - 3. **NOTICE.** Disconnect the positive (+) 12 Vdc terminal from supply battery. Otherwise, damage to unit could occur.
 - 4. **Wa Rnin G!** FIRE OR EXPLOSION HAZARD. Turn off LP gas at supply tank. Failure to obey this warning could result in death or serious injury.
 - 5. **ca UTion !** BURN HAZARD. Allow cooling unit piping to cool before touching. Failure to obey this caution could result in injury.
 - 6. Remove lower vent.
 - 7. Disconnect 120 Vac power cord from receptacle at rear of refrigerator.
 - 8. Disconnect 12 Vdc power supply at rear of refrigerator. Tape or cap ends of wiring.
 - 9. **NOTICE.** Use back up wrench to avoid damaging equipment. See (FIG. 1).

Disconnect and cap LP gas line at rear of refrigerator.

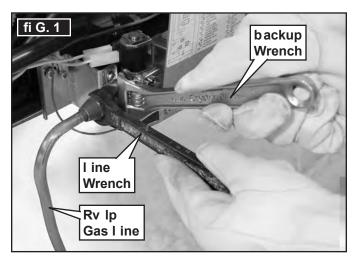


- 10. Remove installation screws and slide refrigerator out of alcove approximately 6 inches.
- 11. Remove upper vent.

b.

1. Grasp air as shown and insert into upper vent. See (FIG. 2).




 Slide air behind cooling unit frame. See (FIG. 3) & (FIG. 4). Refrigerator shown not installed for demonstration purposes.

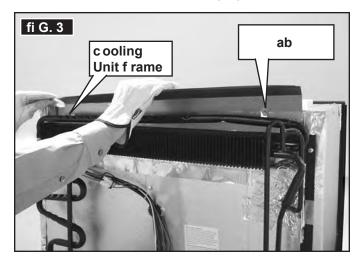



pRoced URe

 When in correct position the air tabs should rest on top of the cooling unit See (FIG. 5).

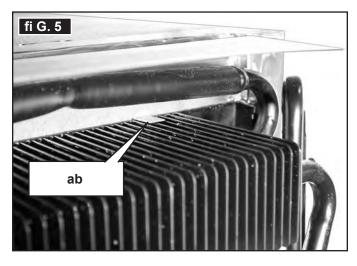

c. Reinstall Refrigerator

- 1. Return refrigerator to original position and install installation screws.
- 2. Reconnect the 120 Vac power cord.
- 3. Reconnect the 12 Vdc power supply.
- 4. **NOTICE.** Use backup wrench technique to avoid damaging equipment. See (FIG. 1).

Reconnect the LP gas line.

- 5. Turn on LP gas supply.
- 6. **Wa Rnin G!** FIRE OR EXPLOSION HAZARD. Never use an open to check for gas leaks. Failure to obey this warning could result in death or serious injury.

Check LP gas line and all for leaks using an approved solution. The appearance of bubbles indicates a leak and should be repaired immediately.

- 7. Reinstall lower and upper vent.
- 8. Restore 120 Vac and 12 Vdc power.



This manual has been provided courtesy of My RV Works, Inc.

www.myrvworks.com



You can find more RV service manuals here:

www.myrvworks.com/manuals



DARREN KOEPP - OWNER, MY RV WORKS, INC.

All service manuals provided on www.myrvworks.com are believed to be released for distribution and/or in the public domain.