

“No Cool” Hard Lockout Reset Procedures For the 628661-Power Board

03/17/06

2 possible reset procedures are available for the 628661-power board (Depending upon the refrigerator model)

“Hard Lockout” Reset Procedure 1: Done via the front panel display


(Can be done on all models except the N811/611 models)

Entering the diagnostic mode of operation and then clearing fault history screen 6 resets the no cool “hard lockout” condition. This procedure can be found in the Service Manual.

“Hard Lockout” Reset Procedure 2: Done via the power board

(Can be done on all models)

P2-2 opening

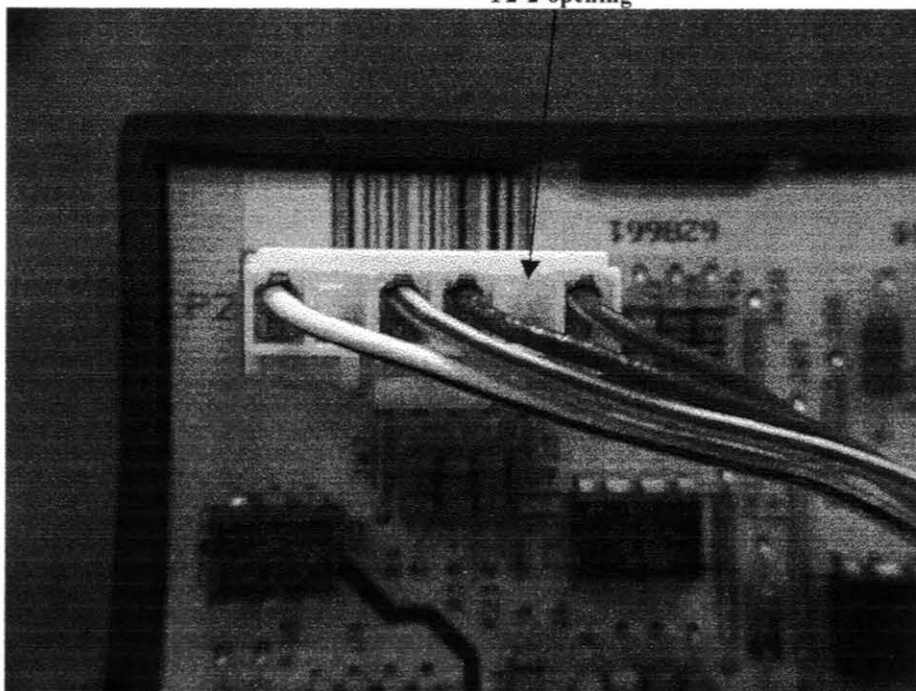

With the refrigerator powered ON and operating in the Manual AC Mode (AC power cord disconnected from the power board);

1. Insert one end of a piece of multi stranded wire (10 gauge works well) whose insulation is stripped ½” on both ends, into the P2-2 opening and hold into place.
2. Place the other end of the multi stranded wire to ground (metal back panel) and hold it in place for a minimum of 10 seconds.

This manual has been provided courtesy of
My RV Works, Inc.

www.myrvworks.com



You can find more RV service manuals here:

www.myrvworks.com/manuals

Over the years of running a mobile RV repair service, having a dedicated place to access service manuals for all the different appliances and components found on RVs was something that I always had a desire to create.

I hope this resource makes your RV repairs easier, as it has mine, but please be careful and follow proper safety practices when attempting to repair your own RV.

If in doubt, please consult with a professional RV technician!



DARREN KOEPP - OWNER, MY RV WORKS, INC.

All service manuals provided on www.myrvworks.com are believed to be released for distribution and/or in the public domain.